

technical@astaaratechnology.com

PRODUCT INFORMATION January 2021

Leak detection technology for flexible packaging_



ALPHAPRO

Automatic leak detector



 ϵ

The **AlphaPro** is a fully AUTOMATIC Leak Detector dedicated to flexible packaging for the Food, Pet Care and Cosmetic Industries. It has been specially designed for assembly line sample testing in Factories which handle large production volumes, and that have to follow Food Safety Management Systems according to ISO 22000 & HACCP.

Current leak testing methods.

80% of Industrial Leak Detection devices are using pressure decay today. It is very effective to measure leaks for products that are rigid, whose shape does not change when put under pressure.

However, measuring precisely a leak by measuring pressure decay is only precise and reliable if the volume of the sample is not changing during the measurement, which is not the case for flexible packaging.

Flow measurement at a Constant Pressure is the only reliable method for measuring a leak in a flexible packaging. It follows DIN 55508-1 of 01/02/2018.

This is this method that has been selected to develop the **AlphaPro**, ensuring total precision and reliability.

AlphaPro main advantages:

- Fully automated process and data immediately available.
- Measure leaks > 5 μm.
- Data immediately available.
- Accurate analyzed results.
- ◆ ISO 22000 & HACCP compliance.
- Cost savings (the AlphaPro operates without consumables).
- Modified Atmosphere Packaging (MAP) packaging Control.
- Brand protection and lasting taste for your products.
- ♦ Semi-automatic calibration check.



technical@astaaratechnology.com

PRODUCT INFORMATION January 2021

Leak detection technology for flexible packaging

Operating instructions:


To test products, divert samples from the assembly line to an inspection line where the **AlphaPro** has been installed, and the leak test is then performed without any human intervention whatsoever (it is a destructive test). Results are visible on the **AlphaPro** screen, these can be transferred instantly to a computer via a USB connection to study the results on a pivot table.

Optional: semi-automatic calibration check.

A calibrated leak is built-in the leak testing unit (CharlieCalibration) of the **AlphaPro**. The value of this calibrated leak is stored in the device's memory (the leak is expressed in cc/mn at a given pressure in mB). The operator can compare the **AlphaPro** calibration with the calibrated leak value at any time, and determine if recalibration is required.

Optional monitor:

The optional monitor (15.6") with integrated calculator displays the leakage results of the previous tests.

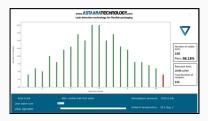

The histogram shows the distribution of the results, and helps to understand if the production is experiencing an unfavourable drift.

Technical specification:

The **AlphaPro** consists of 2 separate units: an **Alpha-Tower** (patented perforating device) and a leak testing unit. The **AlphaTower** and the leak testing unit are communicating via a PS/2 cable and a PU tubing.


1. AlphaTower:

Patented perforating device.



- OLED display 1.5".
- Servo driven internal perforating thin conical stainless steel pointer.
- Silicon bellows diameter: 15mm* (* other sizes / shapes: consult us).
- Cantilever holder for free movement of tower.

2. Leak testing unit:





- Display: 4.3" resistive touch screen.
- Alicat electronic pressure controller from U.S.A., 1000 mbar scale.
- Alicat mass flow meter from U.S.A., 1000 sccm scale.
- Microprocessor: embedded ATMEL2560, 16 Mhz.
- Calibrated leak port.

Foot print: 260 x 250 mm Weight: 10 Kg.

The **AlphaPro** is guaranteed 3 years.

WARRANTY TERMS AND CONDITIONS, other ASTAARA products, videos, dimensions, weights, drawings and further information:

www.ASTAARATECHNOLOGY.com.

Manufacturer: Astaara Technology Pte. Ltd.

All rights reserved.